

Projector Installation Troubleshooting Cheat Sheet

Problem	Likely Cause	Quick Fix
No image on screen	Loose/wrong cable, wrong input source, lamp not on	Check/replace cable, select correct input, remove lamp
Blurry image	Out-of-focus lens, wrong distance, dirty lens	Adjust focus ring, reposition projector, clean lens with lens cloth
Image cut off / doesn't fit	Wrong aspect ratio, overscan, zoom in/out	Match device resolution, adjust zoom, disable overscan
Overheats / shuts down	Blocked vents, dirty filters, poor ventilation	Clear vents, clean/replace filters, improve airflow
Remote not working	Dead batteries, blocked IR sensor	Replace batteries, clear line of sight, test physical button
Misaligned image	Uneven mount, poor alignment	Level mount, tighten screws, use keystone or lens shift
No sound	Audio not routed, wrong cable, muted projector	Check audio output, connect correct cable, unmute/projector
Flickering image	Loose cable, bad lamp, electrical interference	Reseal/replace cable, check lamp, use grounded power